




COMHANHOLLAND

ALUMINIUM | R.V.S. | MAATMETAAL

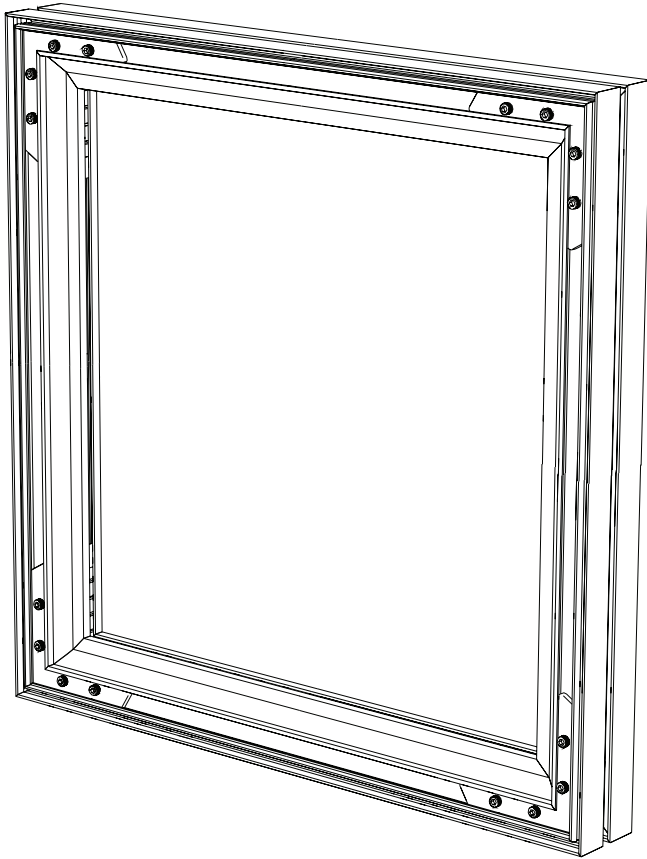


T-Flex 46 Basic®


Montage advies / Assembly recommendation / Montage vorschlag

www.comhan.com


170619

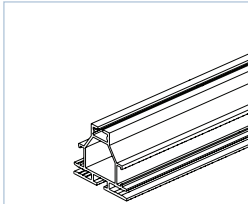


131114/16

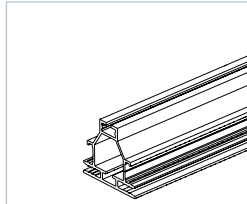


131115/17

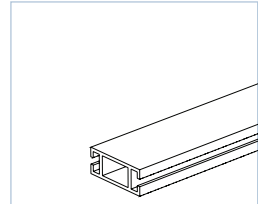


131018

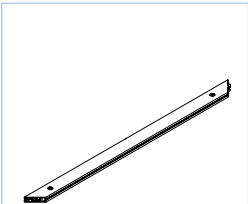


131028

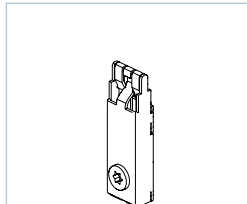


131022/27

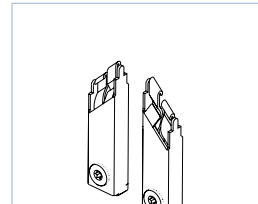


131023

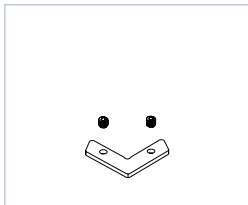


137158

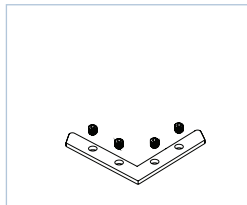


137154

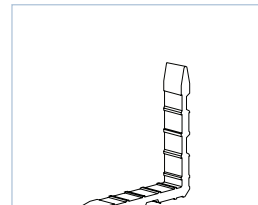


137620

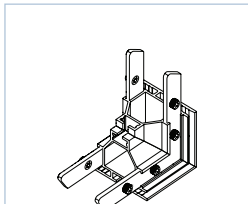


131119

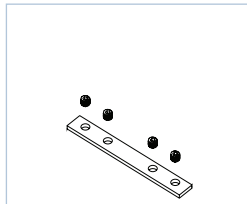


137152

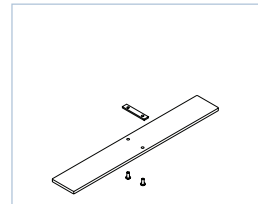


131118/131339/131340

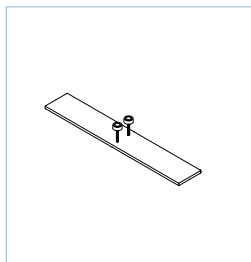


131037

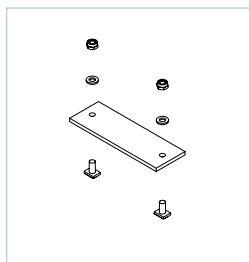


130709

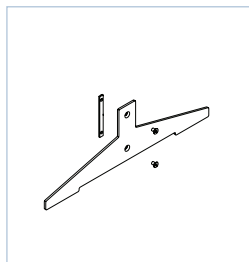


131034

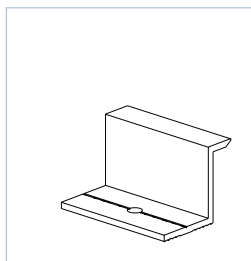


131113

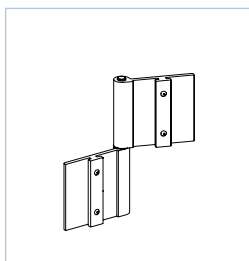


131030/31

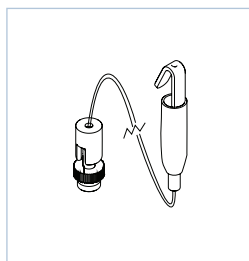

130655


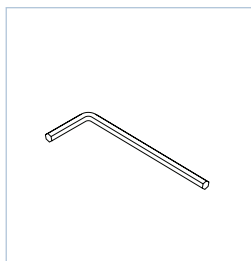



131029/41/43

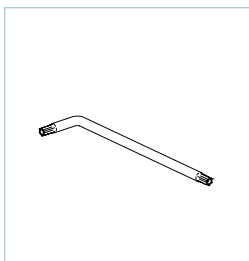


131024

T-Flex 46 Basic®

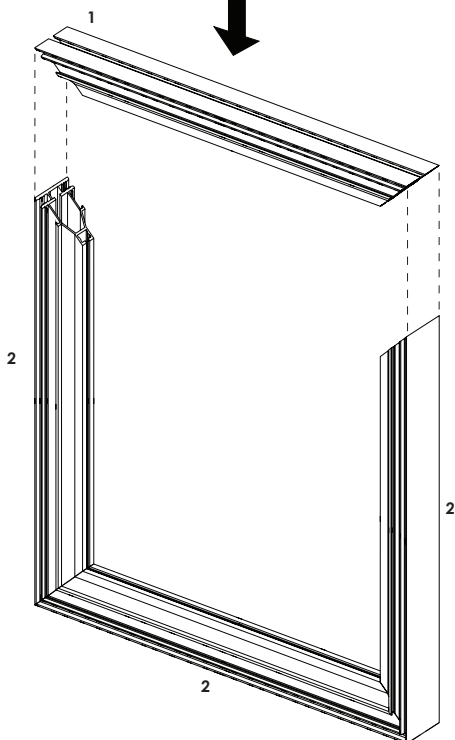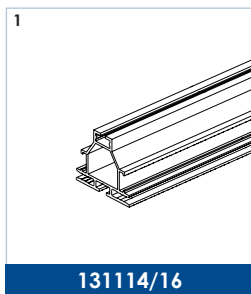


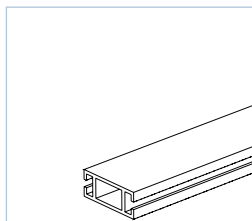


131018

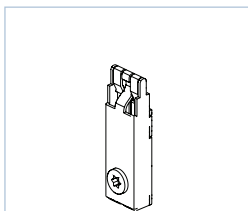


131022/27

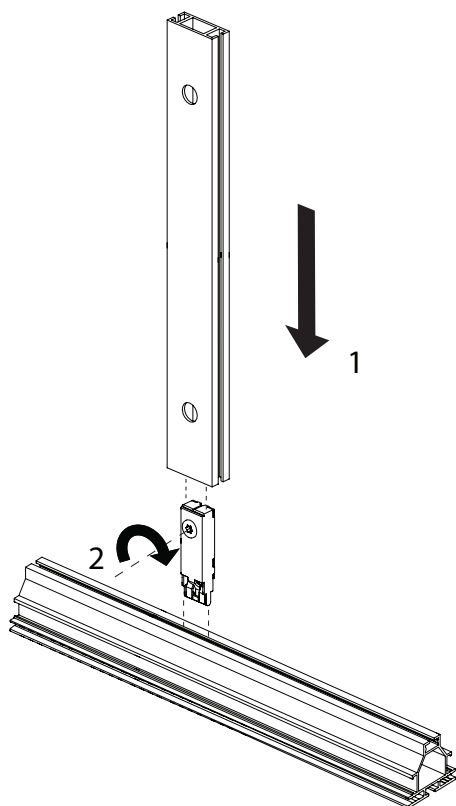


T-Flex 46 Basic®

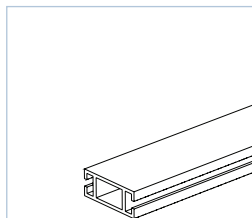


131018

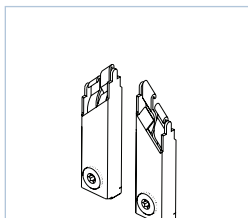

131023

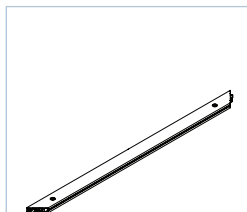


131028

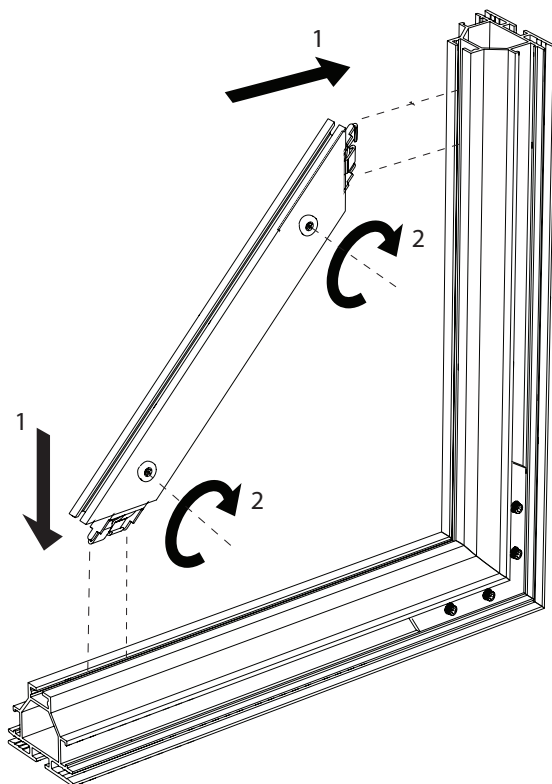

T-Flex 46 Basic®




137158









137154




137620

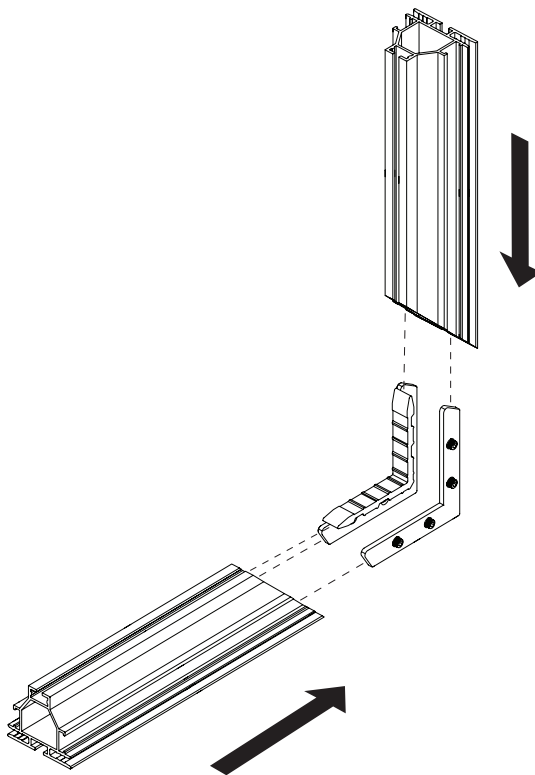

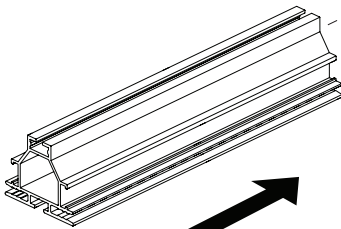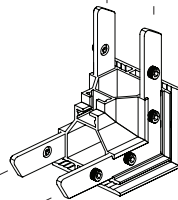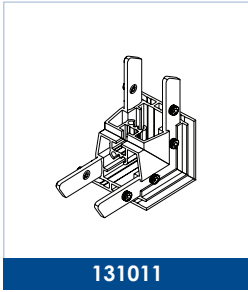


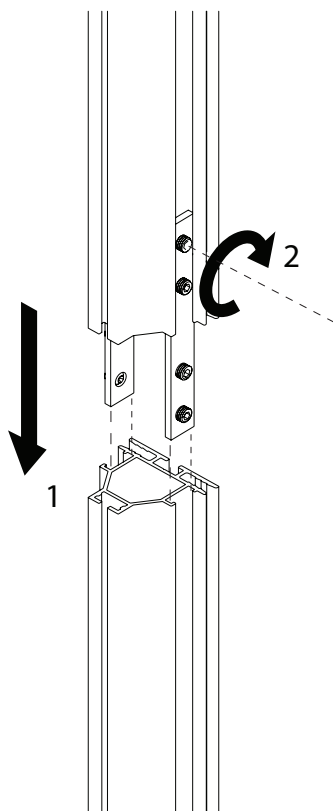
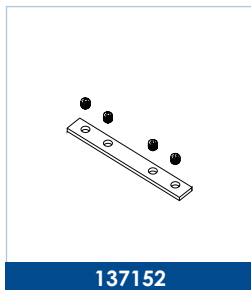


T-Flex 46 Basic®


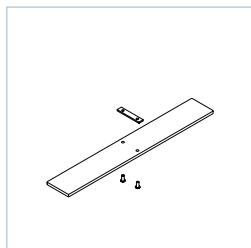



131118/131339/131340

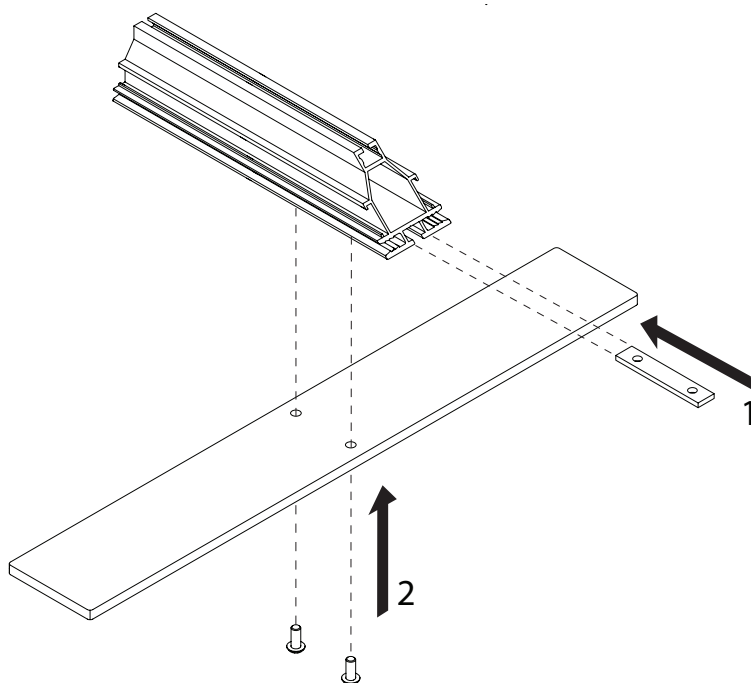

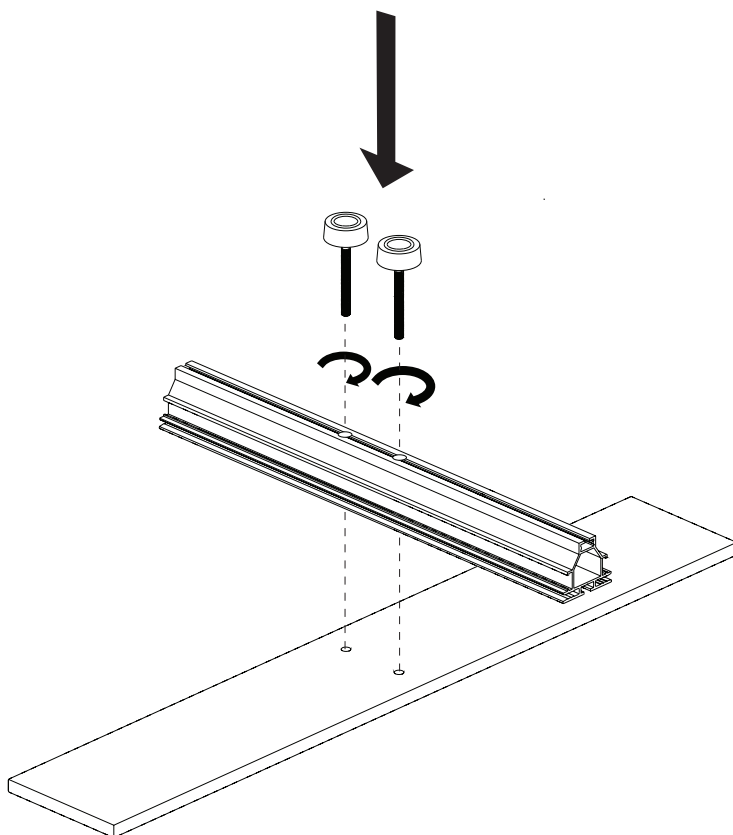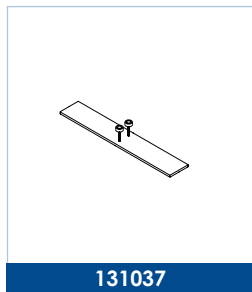



T-Flex 46 Basic®

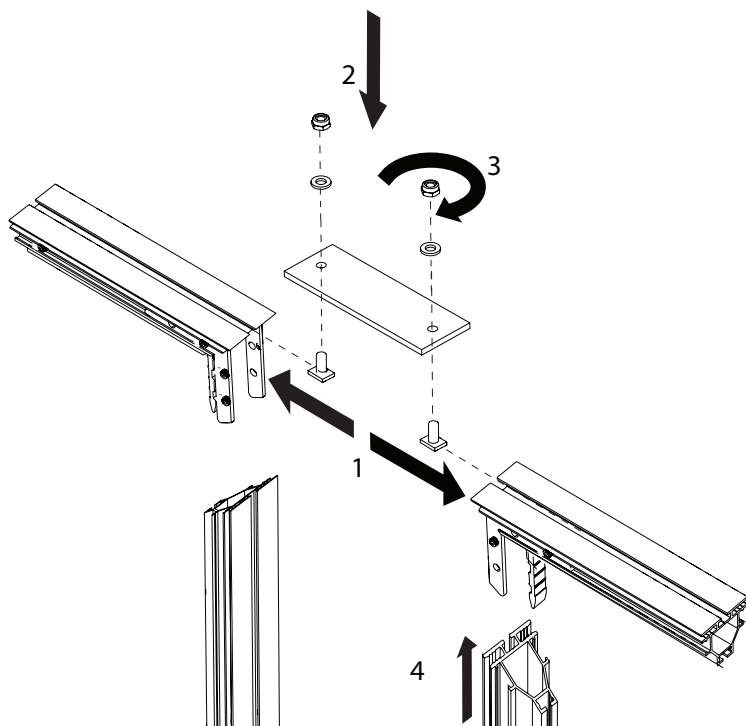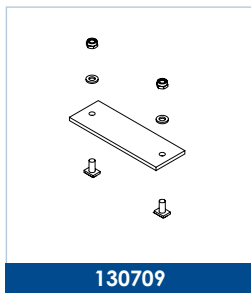

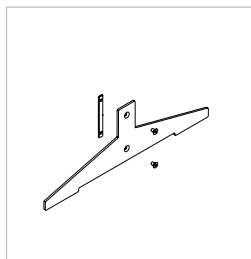

131034

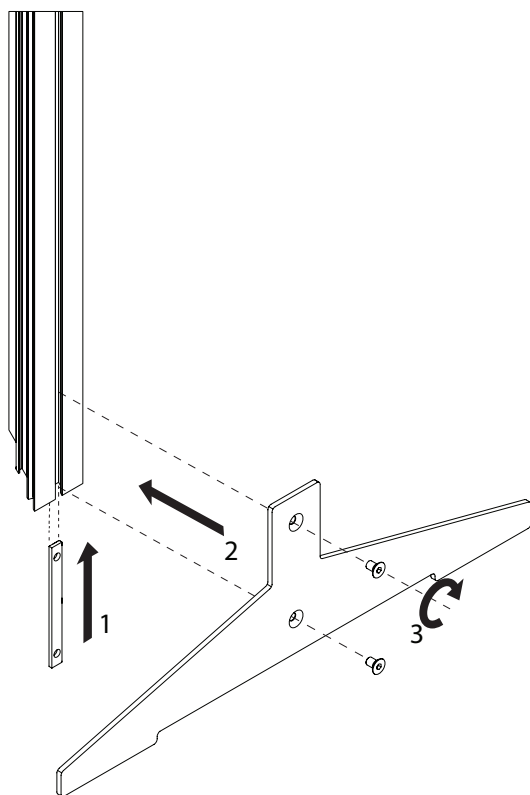

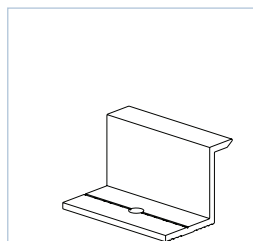

131113

